

# Aria 34E

## Key Phone User Guide



### Placing a Call

- Dial an Extension number
- Or: Dial the external number required

### Call Transfer

- While connected to an outside line, press the **TRANS/PGM** button
- Dial the desired extension number (**700-899**)
- Hang up to complete call transfer
- Or: Announce the call, then hang up to complete call transfer

### Call Pick-up

- Dial **\*1** to answer an unattended phone ringing in your area.

### Storing Station Speed Dial Numbers

- Press the **TRANS/PGM** Button
- Press the **SPEED** Button or dial **\*40**
- Dial the speed bin number (**01 ~ 19**)
- Dial the number you wish to store
- Press the **HOLD/SAVE** button or dial **recall**

### Storing System Speed Dial Numbers (On Station 700 only)


- Press the **TRANS/PGM** Button
- Press the **SPEED** Button
- Dial the speed bin number (**200 ~ 399**)
- Dial the number you wish to store
- Press the **HOLD/SAVE** button

### Using Speed Dial Numbers

- Press the **SPEED** Button or dial **\*9**
- Dial the speed bin number you wish to call (**01 ~ 19 & 200-399**)

### Dialing By Name

- Press the **SPEED** button twice
- Press **1** for extensions, **2** for Personal or **3** for System Speed Dials
- Dial letter you require/or toggle up or down with volume key
- Press **1** or **2** depending on where the name sits on the display
- Press **HOLD/SAVE**

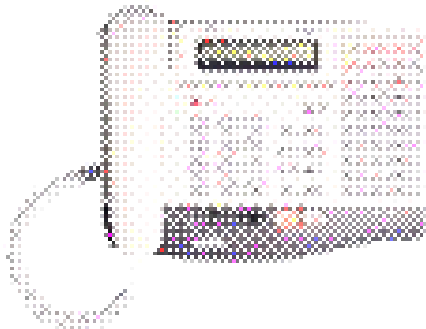

### Do Not Disturb (DND)

- Dial **\*53** (Toggle On / Off)

### Paging

- Dial **#00** for "All Call" Paging
- Dial **#5** for External Paging

### Voice Mail

Dial slowly, wait for all confirmation tones to complete dialing

### Greetings;

Record Greeting Dial **\*224**

### Messages:

Retrieve Message Press **Callback** or **\*67**

Delete Message Press **Conf**

Save/Skip Message Press **Hold/Save**

Replay Message Press **Callback**

### Call Forward

- Dial **49**
- Dial the desired call forward type
  - 1 - Immediate**
  - 2 - Busy**
  - 3 - No Answer**
  - 4 - Busy/no answer**
  - 5 - Immediate to an External Number**
  - 7 - Immediate to voice Unit**
  - 8 - no answer to voice Unit**
- Dial the destination you wish to forward your calls to (**700-899**)

### To cancel a Call Forward

- Dial **49#**

### Date and Time (On Station 700 only)

- Press the **TRANS/PGM** Button
- Dial **#1**
- Enter Date (**YYMMDDHHMM**)
- Press the **HOLD/SAVE** button

### Holding Calls

- To place call on hold
- Press the **HOLD/SAVE** button
  - To retrieve
  - Press flashing line button

### Call Park

- While connected to an outside call
- Press the **TRANS/PGM** button or **recall**
  - Dial the Call Park Location (**950~954**)
  - Hang up.

### Retrieve a Parked Call

- Dial the Call Park Location (**950~954**)

### Flexible Keys

#### Program Flexible Buttons

- Press the **TRANS/PGM** button
- Press a flexible button you wish to program
- Enter the desired code (*refer to the table below*)
- Press the **HOLD/SAVE** button

Direct Station Select	700~ 899
Call Park	950 ~ 954
Hunt Group	9700 ~ 9729
Group Call Pickup	*1
Directed Call Pickup	*42
Station Speed Dial	SPD 01 ~19 or 200-399
Ring Type	TRANS/PGM + 50
Answer Mode	TRANS/PGM + 49
Background Music	TRANS/PGM + 73
Call Back	TRANS/PGM + 92
Redial	TRANS/PGM + 97
Conference	TRANS/PGM + 91

<b>Q - 11</b>	<b>A - 21</b>	<b>D - 31</b>
<b>Z - 12</b>	<b>B - 22</b>	<b>E - 32</b>
<b>- - 13</b>	<b>C - 23</b>	<b>F - 33</b>
<b>1 - 10</b>	<b>2 - 20</b>	<b>3 - 30</b>
<b>G - 41</b>	<b>J - 51</b>	<b>M - 61</b>
<b>H - 42</b>	<b>K - 52</b>	<b>N - 62</b>
<b>I - 43</b>	<b>L - 53</b>	<b>O - 63</b>
<b>4 - 40</b>	<b>5 - 50</b>	<b>6 - 60</b>
<b>P - 71</b>	<b>T - 81</b>	<b>W - 91</b>
<b>R - 72</b>	<b>U - 82</b>	<b>X - 92</b>
<b>S - 73</b>	<b>V - 83</b>	<b>Y - 93</b>
<b>Q - 7*</b>	<b>8 - 80</b>	<b>Z - 9#</b>
<b>7 - 70</b>		<b>9 - 90</b>
<b>*1 - Blank</b>		
<b>*2 - :</b>	<b>0-00</b>	<b>#</b>
<b>*3 - ,</b>		

**TRANS/PGM** The **TRANS/PGM** key is used to **TRANSFER** calls and **PROGRAM** system features on the keyset.



**SPEED** The **SPEED** key is used to program and dial Station and System Speed Dial numbers



**CONF** The **CONF** key is used to establish Multiparty Conference calls



**REDIAL** The **REDIAL** key is used to dial a previously dialled number



**MUTE** The **MUTE** key mutes the microphone so the other party cannot hear you



**CALLBK** The **CALLBK** key is used automatically redial a busy number when it becomes free



**FLASH** The **FLASH** key is used to access some network features such as Call Waiting, Centrex, and Gateway.



**ICM** The **ICM** key is used to place an internal call on hold



**MON**

The **MON** key is used to activate the speaker on the phone for the hands free speakerphone.




**HOLD/SAVE**

The **HOLD/SAVE** key is used to place calls on **HOLD**, it is also used to confirm the programming of features



**For Service Call:**  
**06 3570900**  
**Fax**  
**063570901**  
**Email**  
**Mike@telephonics.co.nz**

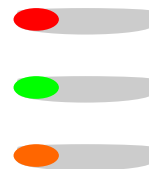

**Flexible keys:**  
The colour of the LED signifies the status of stations, or lines.  
Feature access also can be programmed on these keys.



**34E Key Phone  
User Guide**