


IP DECT Phone

Placing a Call

- Dial an outside number or internal extension Number.
Press Green Handset 

To end Call

Press Red hang up button .

Call Transfer

- While connected to an outside line, press **Options / Transfer**
- Dial the desired extension number, **(700-899)**
- Hang up to complete call transfer
Or: Announce the call, then hang up to complete call transfer

External Call Transfer

- While connected to an outside line, press the **TRANSFER**
- Dial outside number
- Press **Send**

Call Pick-up

- Press **Pick Up Key or *88 #** to answer an unattended phone ringing

Using Speed Dial Numbers

- Press the **Directory** Soft Button then press 1 for all contacts or use soft button to search

Ring Type Mode

- Press **Menu** button Scroll to basic press 4 followed by 1, 2 or 3
- Press **Save** button

User Guide

Redial

- Press options button, scroll to appropriate number—press send

Voicemail

- Push voicemail key and follow prompts

Call Forward

- Press Menu scroll to the features
- Press 1 for call forward select options :
- 1 always forward
- 2: busy forward
- 3: no answer forward
- Press 1 to enable call forward and 2 to enter phone number to forward to

To cancel a Call Forward

- Press Menu scroll to the features
- Press 1 for call forward select options :
- 1 always forward
- 2: busy forward
- 3: no answer forward
- Press 1 to disable and 2 to delete number



Holding Calls

- Press hold button
To retrieve press flashing green light



For further
assistance
contact our
help desk
06 3570900

Call Mute

Press  during a call to mute the call.
Press  again to un-mute the call.

Rename Handset

Press OK key to enter the main menu, and select Settings
Handset Name
Edit the current value in the rename field
Press the Save soft key to accept the change

Volume Adjustment

Press up or down button during the call to adjust the volume of the currently used audio device.
Press up or down button when handset is idle to adjust the ringer volume.

Ring tones

Press the OK key to enter the main menu, and select Settings Audio Ring Tones Melodies

Local Directory :

To add a contact:

1. Press the OK key to enter the main menu, and select Directory.
2. Press the Options soft key, select New Contact.
3. Enter the desired values in the Name, Number and Mobile fields.
4. Press the **Save** soft key to accept the change.

To edit a contact:

1. Press the OK key to enter the main menu, and select Directory.
2. Press up or down arrow to highlight the desired entry.



For Service Call:
06 3570900
Fax
063570901
Email
info@telephonics.co.nz
Web
www.telephonics.co.nz



User Guide
Cordless DECT Phone